
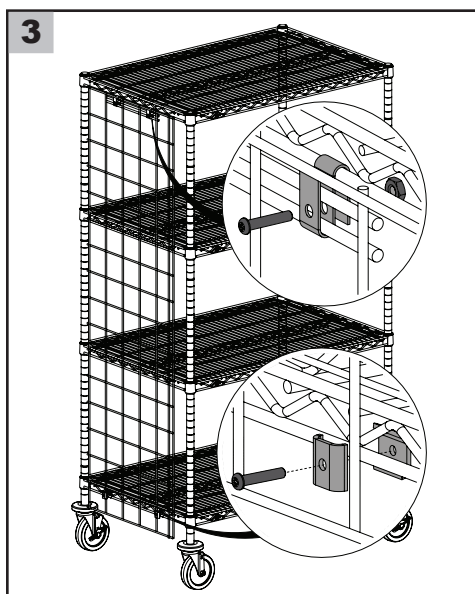






## ENCLOSURE PANELS WITH TAPPED/UNTAPPED HARDWARE

### SUPER ERECTA (Top & Bottom)

Mobile Unit / Unité mobile / Unidad móvil

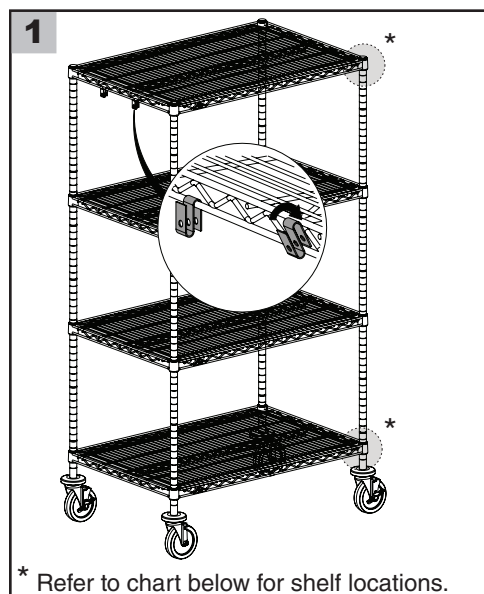

### Stationary Unit / Unité stationnaire / Unidad inmóvil

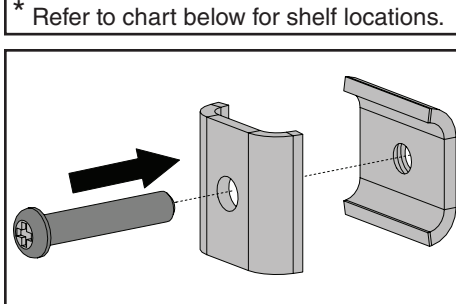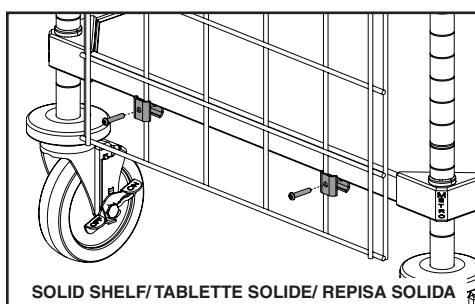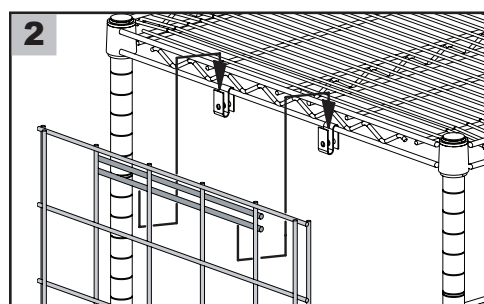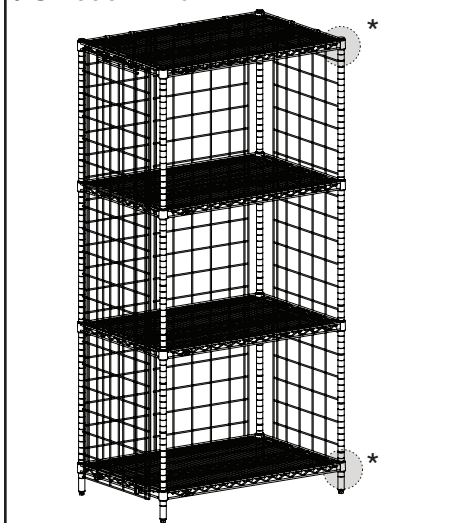

### SHELF LOCATIONS FOR ENCLOSURE PANEL ASSEMBLY

EMPLACEMENTS DES TABLETTES POUR L'ASSEMBLAGE DES PANNEAUX D'ENCEINTE

UBICACIONES DE LOS ESTANTES PARA ENSAMBLAR LOS PANELES DE CIERRE

Configuration: Super Erecta Wire Top Shelf & Super Erecta Wire Bottom Shelf		
Post Height	Top Groove #	Bottom Groove #
54 in. (1372mm)	54	5
63 in. (1600mm)	62	5
74 in. (1880mm)	74	5

**NOTE:** For stationary applications (without casters), the bottom shelf may be positioned at a higher position on the post to allow for the minimum of 6" clearance below the bottom shelf.





For Detail assembly scan here /  
Scanner ici pour l'assemblage détaillé /  
Para ver instrucciones detalladas sobre el  
montaje, haga el escaneo aquí.

NOTE: Top-Track (Not Shown)	
Stationary Units Uses The 74" Tall Enclosure.	
Top Groove #	Bottom Groove #
76	7
Mobile Units Uses The 63" Tall Enclosure. Super Erecta Bottom Shelf Is Used	
Top Groove #	Bottom Groove #
72	3

**SUPER ERECTA WIRE (Top) &  
SUPER ERECTA SOLID (Bottom)**



**ALL SUPER ERECTA SOLID**

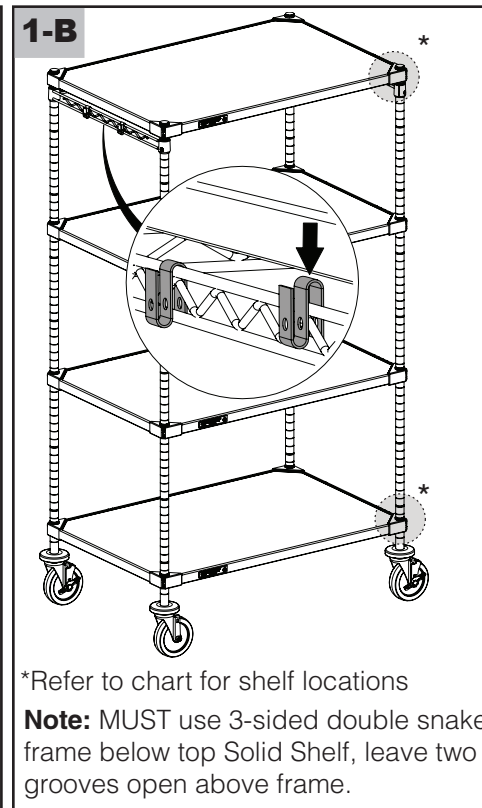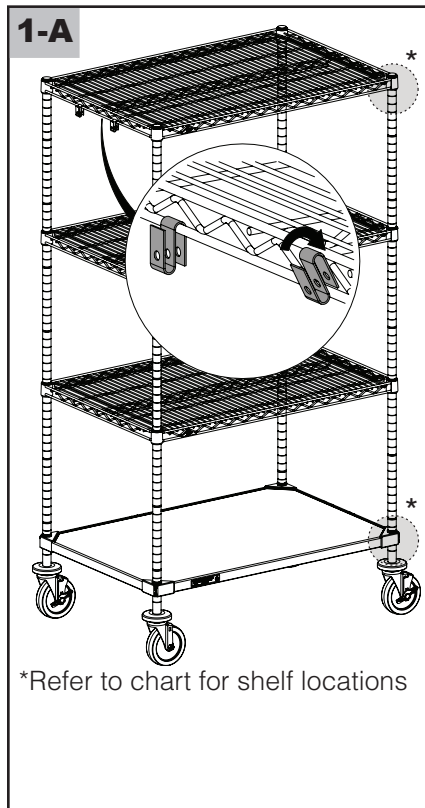

Configuration: Super Erecta Wire/Solid Top Shelf & Super Erecta Solid Bottom Shelf		
Post Height	Top Groove #	Bottom Groove #
54 in. (1372mm)	54	5
63 in. (1600mm)	62	5
74 in. (1880mm)	74	5

**ALL SUPER ADJUSTABLE SUPER ERECTA (SASE)**

**SUPER ADJUSTABLE SUPER ERECTA (Top) SUPER ERECTA SOLID (Bottom)**

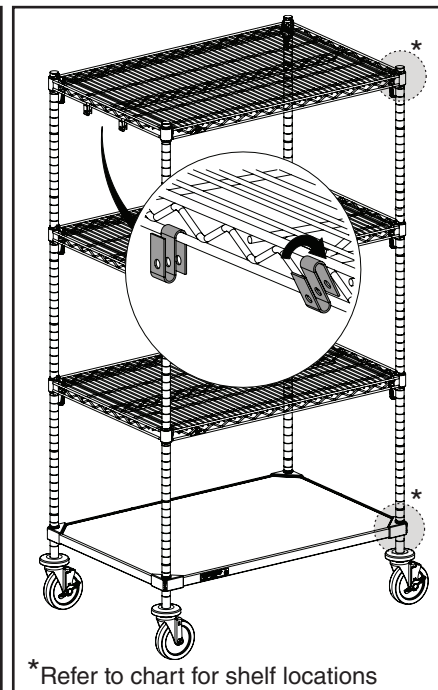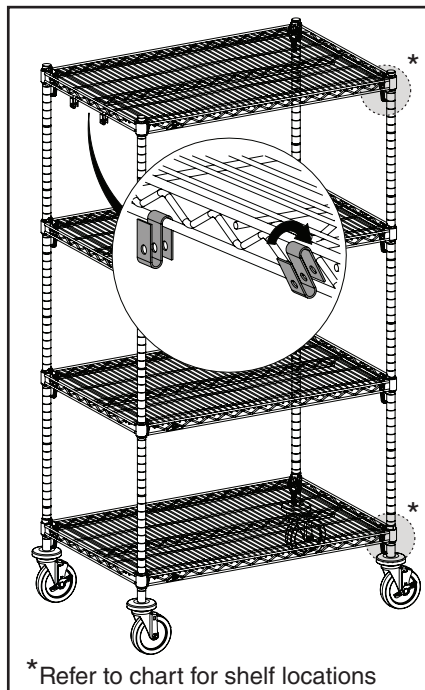

Configuration: All Super Adjustable Shelves		
Post Height	Top Groove #	Bottom Groove #
54 in. (1372mm)	53	5
63 in. (1600mm)	61	5
74 in. (1880mm)	73	5

Configuration: Super Adjustable Top Shelf & Super Erecta Wire/Solid Bottom Shelf		
Post Height	Top Groove #	Bottom Groove #
54 in. (1372mm)	53	5
63 in. (1600mm)	61	5
74 in. (1880mm)	73	5



We put space to work.