



We put space to work.

## Side-Load Polymer Dish and Tray Carts — SSD/DSD Series

### High Capacity:

- Metro's Side-Load Dish and Tray Carts come in single and double-sided models. They are perfect for holding a variety of different sized dishes, odd-shaped platters and trays.
- Holds up to 60 dishes in each column, and/or approximately 80 trays per column.

### Flexible:

- Adjustable dividers accommodate a variety of different sized dishes and trays.
- Divider system easily adjusts to keep dish columns separated and eliminates dish chipping and crazing.

### Maneuverable:

- New recessed handles increase maneuverability and make transport effortless.
- Low overall height allows for maximum space utilization and convenient under counter storage.
- Four 5" (127mm) diameter swivel casters (two with brakes) with neoprene wheels provide for easy maneuverability and positioning.

### Durable Construction:

- One-piece, sturdy polymer construction is extremely safe for dishes easy to clean, and is resistant to cracking, peeling or chipping.

### Sanitary:

- Smooth, rounded corners and seamless cart surfaces eliminate crevices and simplify cleaning.
- Built-in drain holes promote cleanability and eliminate the possibility of water build up.
- Dishes/Trays are stored 12" (305mm) above the floor surface, minimizing dust and water marks from floor dirt and splashing.
- Included translucent vinyl cover protects clean dishes from dust and water splashes while in storage and allows workers to view contents without removing the cover.
- NSF Listed.

### Microban® Antimicrobial Product Protection\*\*:


- Cart body has built-in \*Microban® Antimicrobial Product Protection which inhibits the growth of bacteria, mold, mildew, and fungi that cause odors, stains, and product degradation.

\*\*Not sold in Canada.

\*Microban® and the Microban® symbol are registered trademarks of the Microban Products Company, Huntersville, NC.



**Model SSD16**  
Shown above with Optional  
Divider Accessory A110

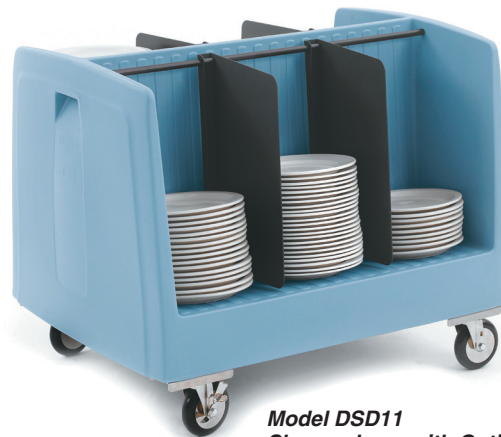

**Model DSD11**  
Shown above with Optional  
Divider Accessory A110

All Metro Catalog Sheets are available on our website: [www.metro.com](http://www.metro.com)



**InterMetro Industries Corporation**  
North Washington Street, Wilkes-Barre, PA 18705  
Product Information, U.S. and Canada: 1.800.992.1776  
Outside U.S. and Canada: [www.metro.com/contactus](http://www.metro.com/contactus)

L02-107  
Printed in U.S.A. Rev. 1/24

Information and specifications are subject to change without notice. Please confirm at time of order.

Copyright © 2024 InterMetro Industries Corp.




**Side-Load Polymer Dish and Tray Carts — SSD/DSD Series**

**16.32**

# Side-Load Polymer Dish and Tray Carts — SSD/DSD Series

## Specifications

- **Material:** High-density polymer containing Microban Antimicrobial product protection.
- **Construction:** Seamless, molded plastic; bins have 6° angle tilt.
- **Casters:** Four B5DN swivel casters (two with brakes). Ball bearing swivel; ball bearing axle. Nickel-plated, pre-lubricated casters with neoprene tires bolted to chassis.
- **Optional Divider Assembly:** One required per slide.
- **Protective Cover:** Standard heavy-duty 6-mil vinyl cover.

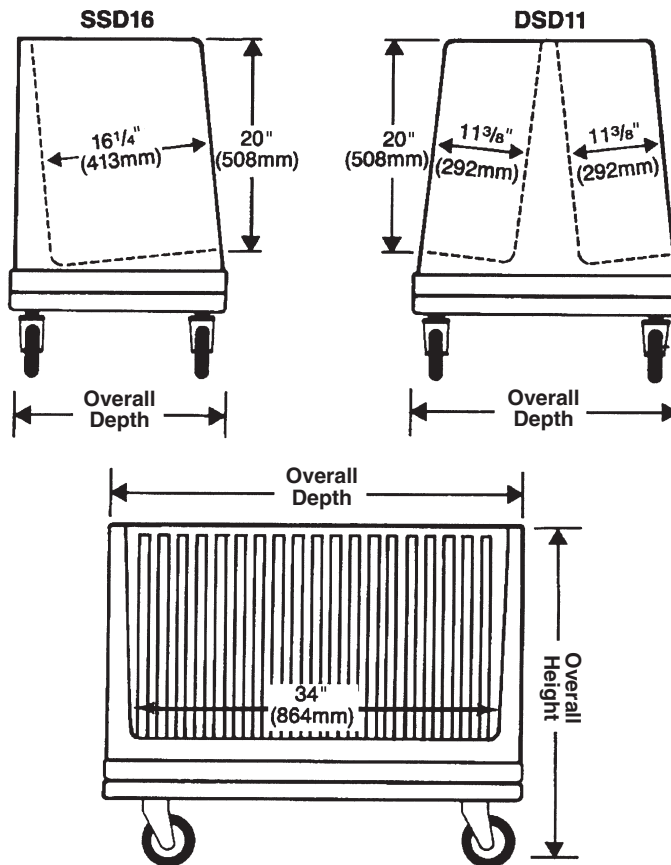

## Dimensions

Model No.	Overall Height		Overall Width		Overall Depth		Approx. Dish Capacity Per Column*	Approx. Tray Capacity Per Column*	Approx. Pkd. Wt.	
	(in.)	(mm)	(in.)	(mm)	(in.)	(mm)			(lbs.)	(kg)
<b>SSD16</b>	32 <sup>15</sup> / <sub>16</sub>	837	39 <sup>5</sup> / <sub>8</sub>	1007	21 <sup>5</sup> / <sub>8</sub>	550	60	80	82	37
<b>DSD11</b>	31 <sup>7</sup> / <sub>8</sub>	810	39 <sup>5</sup> / <sub>8</sub>	1007	29 <sup>1</sup> / <sub>16</sub>	739	60	80	100	45

\*Loading capacity dependent upon china and tray shapes/thickness.

## Accessories

Model No.	Description
<b>A110</b>	Divider Assembly (1 rod and 2 dividers)
<b>A115</b>	Additional Divider
<b>SSDV16</b>	Additional Cover for Single Side-Load Dish and Tray Cart
<b>DSDV11</b>	Additional Cover for Double Side-Load Dish and Tray Cart