



Item # _____

We put space to work.

Job _____

MetroMax 4 Drying Racks combine the corrosion protection and strength of MetroMax 4 with the convenience of a drying rack unit that efficiently sorts and holds pots, pans and trays while they dry to prevent wet nesting.

Three Tier Tray Rack:

36" (914mm) and 48" (1219mm) lengths. Each consists of (3) MetroMax 4 shelf frames, (4) 63" (1600mm) mobile posts, (4) corrosion resistant polymer horn casters (two swivel, two brake), (3) tray racks,

Four Tier Bulk Drying and Tray Rack:

36" (914mm) and 48" (1219mm) lengths. Each consists of (3) MetroMax 4 shelf frames, (1) MetroMax 4 shelf, (4) 63" (1600mm) mobile posts, (4) corrosion resistant polymer horn casters (two swivel, two brake), (2) stainless steel drop-in racks, (1) tray rack.

Four Tier Tray and Steam Pan Rack:

36" (914mm) and 48" (1219mm) lengths. Each consists of (4) MetroMax 4 shelf frames, (4) 63" (1600mm) mobile posts, (4) corrosion resistant polymer horn casters (two swivel, two brake), (2) tray racks, (2) steam pan racks.

Key Benefits

- **Promotes food safety** by preventing wet nesting, where two wet/damp items are nested together preventing proper airflow.
- **Superior air circulation:** Fast drying of trays, cutting boards, pans, lids, pots and all sink items.
- **"Hold strong" slots:** Tray and Pan Racks have tall slots to assure trays, cutting boards, steam pans, and other tall items don't tip over while being loaded/unloaded and during use.
- **Wobble Free, Worry Free mobility:** Sturdy carts are easy to maneuver with swivel polymer casters.
- **Easy to Clean:** Shelf mats, posts and epoxy coated drying racks have built-in Microban antimicrobial product protection. It keeps the product "cleaner between cleanings".
- **Superior Organization:** Optional hanging rails and grids help sort and dry utensils and other vessels with long handles.
- **NSF Listed**



MAX4-PR48VX2



MAX4-PR48VX3



MAX4-PR48VX4



Inhibits the growth of stain and odor causing bacteria. Microban® does not protect users from food borne illness. Normal cleaning practices should be maintained. Microban is a registered trademark of Microban Products Company.

All Metro Catalog Sheets are available on our website: www.metro.com



InterMetro Industries Corporation
North Washington Street, Wilkes-Barre, PA 18705
Product Information. U.S. and Canada: 1.800.992.1776
Outside U.S. and Canada: www.metro.com/contactus

LO2-231
Printed in U.S.A. 10/21

Information and specifications are subject to change without notice. Please confirm at time of order.

Copyright © 2021 InterMetro Industries Corp.



MetroMax® 4 Drying Racks

9.32



MetroMax 4 Drying Racks

Specifications - Shelving Units, Drop-Ins, Tray Racks, Pan Racks

- **Longitudinal Beams & Posts:** Pultrusions - continuous glass fibers and thermo set resin composite with built-in Microban antimicrobial product protection. Exterior surfaces are high-impact thermoplastic resin.
- **End Beams, Adjustable Foot & Socket:** Injection molded polyester thermoplastic resin with glass reinforcement.
- **Drop In Rack** -Electro-Polished Type 304 Stainless Steel
- **Cutting Board/Tray Drying Rack:** Corrosion resistant taupe epoxy coated steel with built-in Microban product protection and rigid PVC (non phthalate) extrusions.
- **Shelf Mats:** Polypropylene. Mats contain Microban antimicrobial product protection.
- **Load Capacity:** 200 lbs. (91kg) per drop-in rack, tray rack, or pan rack.
- **Stationary Load Capacity:** 2000lbs. (907kg)
- **Mobile Load Capacity:** 750 lbs. (340kg) per unit
- **Polymer Casters:** 2 swivel, 2 swivel with brakes. Corrosion-resistant, polymer horn, stainless steel axle and hardware. 5" (127mm) diameter.

Dimensions

MetroMax 4 Mobile Drying Rack Units

Three Tray Racks (three tier unit)

Model No.	Nominal Width		Nominal Length		Nominal Height		Approx. Pkd. Wt.	
	(in.)	(mm)	(in.)	(mm)	(in.)	(mm)	(lbs.)	(kg)
MAX4-PR36VX2	24	610	36	914	68	1702	72.7	33.0
MAX4-PR48VX2	24	610	48	1219	68	1702	86.9	39.4

Two SS Drop-ins, One Tray Rack, One Bulk Shelf (4-tier)

Model No.	Nominal Width		Nominal Length		Nominal Height		Approx. Pkd. Wt.	
	(in.)	(mm)	(in.)	(mm)	(in.)	(mm)	(lbs.)	(kg)
MAX4-PR36VX3	24	610	36	914	68	1702	65.0	29.5
MAX4-PR48VX3	24	610	48	1219	68	1702	76.8	34.8

Two Tray Racks and Two Pan Racks (4-tier)

Model No.	Nominal Width		Nominal Length		Nominal Height		Approx. Pkd. Wt.	
	(in.)	(mm)	(in.)	(mm)	(in.)	(mm)	(lbs.)	(kg)
MAX4-PR36VX4	24	610	36	914	68	1702	80.6	36.5
MAX4-PR48VX4	24	610	48	1219	68	1702	95.3	43.2

Note: For the actual dimensions for mobile units, add 2" (51mm) to the nominal dimension to account for the bumpers.



MAX4-PR36VX2



MAX4-PR36VX3




MAX4-PR36VX4


MetroMax 4 Drying Racks




Tip: Convert a MetroMax 4 shelf to an open frame by removing the shelf mat sections.

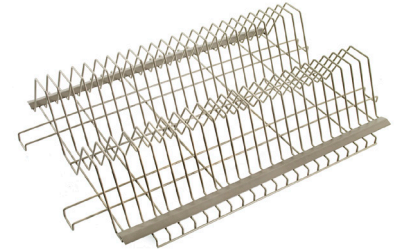

XTR2436XE

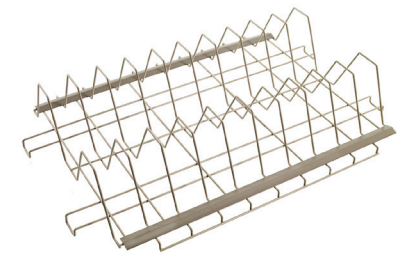

XTR2436XEA

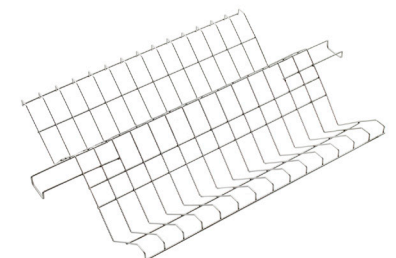

MAX4-DR36S

Cutting Board & Tray Drying Rack Accessories

- Mount to MetroMax 4 open shelf frames (no shelf mats), open grid and solid MetroMax i shelves, MetroMax i open shelf frames, MetroMax Q shelves, Super Erecta Pro, and Super Erecta.
- 1¹/₈" (28mm) or 3" (76mm) slot spacing available.
- Polymer glide strips provide an impact resistant surface for long life.

Model No.	Fits Shelf or Frame (in.) (mm)		Upright Spacing (in.) (mm)		Upright Height (in.) (mm)		Tray Capacity	Approx. Pkd. Wt. (lbs.) (kg)	
XTR2436XE	24x36	610x914	1 ¹ / ₈	28	6	150	24	14.7	6.7
XTR2448XE	24x48	610x1219	1 ¹ / ₈	28	6	150	34	19.8	9.0
XTR2460XE	24x60	610x1524	1 ¹ / ₈	28	6	150	43	25.4	11.5
XTR2436XEA	24x36	610x914	3	76	6	150	10	9.9	4.5
XTR2448XEA	24x48	610x1219	3	76	6	150	14	12.9	5.8
XTR2460XEA	24x60	610x1524	3	76	6	150	17	16.4	7.4

Type 304 Stainless Drop-In Racks (for MetroMax 4 only)

- Drop-ins (models "MAX4-") require a four-sided MetroMax 4 frame.
- A drop-in rack can be added to a standard MetroMax 4 shelf by removing the shelf mats and using the shelf frame.

Model No.	Fits Shelf (in.) (mm)		Height (in.) (mm)		Approx. Pkd. Wt. (lbs.) (kg)
MAX4-DR36S	24x36	610x914	33 ⁷ / ₈	860	
MAX4-DR48S	24x48	610x1219	45 ⁷ / ₈	1165	

MetroMax 4 open shelf frames

- Open shelf frames accommodate the drop-ins, tray racks, and pan racks.
- Bag of 4 wedges included.
- A standard MetroMax 4 may be converted to a frame by removing all shelf mat sections.

Model No.	Fits Shelf or Frame (in.) (mm)		Approx. Pkd. Wt. (lbs.) (kg)	
MAX4-4F2436	24x36	610x914	6.9	3.1
MAX4-4F2448	24x48	610x1219	8.6	3.9

Drip Tray - for a MetroMax i frame or shelf.

- Patent pending water collection accessory is compatible with MetroMax i.
- Consult Spec Sheet 9.32b to learn how to integrate this accessory and its related MetroMax i shelf or shelf frame to a MetroMax 4 unit.



Drip Tray Mounted to a MetroMax i 24x36" (610x914mm) Frame. Steam Pan not included.



We put space to work.®

MetroMax 4 Drying Racks

Sorting Pegs and Hanging Accessories

X6PEG-8PI

6" Tall (152mm) Sorting Pegs


- Installs to any open grid polymer Metro shelf
- Pack of 8 Pegs
- Can be used to manage steam pans 4" (102mm) and deeper
- Material: Mineral reinforced polypropylene
- Model No. **X6PEG-8PK**

X:




Drying Option.

Tray and pan drying wire racks are compatible with any Super Erecta, Super Erecta Pro, or Super Adjustable Super Erecta Shelf.

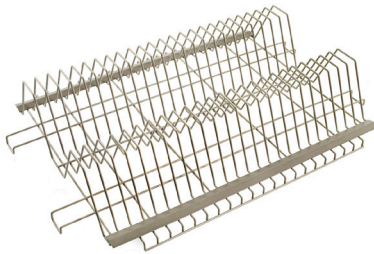

XTR2436XE

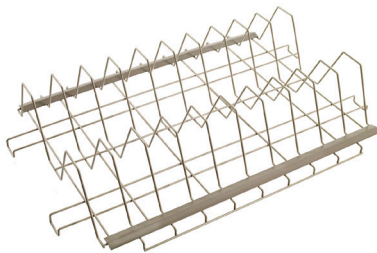

XTR2436XEA



XTR2436XE Shown on a Smartwall unit atop of Super Erecta Shelving in Metroseal Gray.