STARSYS® XD Enclosed Storage

The Starsys Extra Depth (XD) Tall Cabinets and Carts deliver 20% more storage capacity than standard Starsys. Occupying the same footprint as mobile Starsys with wire shelves, Starsys XD increases the utility of available storage space by storing more without taking up more floor space. The ability to slant a shelf enhances access to and visibility of contents stored. The availability of shelf dividers, label holder and bins provides organization of those contents. Starsys XD accommodate bins up to 24" (610mm) [or two bins deep up to 12" (305mm)] to support Lean or Two-Bin Kanban configurations.

Starsys XD Cabinets and Carts have a heavy duty polymer exterior that includes Micoban® antimicrobial product protection to help keep surfaces cleaner between cleaning. Starsys XD units are available preconfigured with one easy order part number or can be configured to meet the specific departmental or operational requirements.

Starsys XD Tall Carts are available in single, double, and triple wide configurations. Starsys XD Tall Cabinets are available in single and double wide configurations.

Benefits

- Choice of stationary cabinets or carts
- · Cart mobility supports efficient and effective replenishment or the staging of supplies at the point of use
- Polymer enclosure won't chip, peel, dent or rust
- Microban® antimicrobial product protection in the polymer keeps product cleaner between cleanings
- Metal framework provides structural rigidity
- Starsys XD wire shelves easily adjust to a 20° up-angle for better visibility or 20° down-angle for supply containment
- Extra depth shelf design can accept two 12" (305mm) bins front to back to support Lean Two-Bin Kanban processes
- Capacity for on-board storage of empty bins during transit for supply replenishment identification
- Available with Clear Doors for visual access or Solid Doors for passive security
- · Security can be enhanced by configuring doors with a key lock or an electronic lock



Double Wide Starsys XD Cart SXRD76MXD2



Double Wide Starsys XD Cabinet Adjustable Wire Shelving shown at -20° angle



CLEANER BY DESIGN*

- Microban* antimicrobial protection helps to keep products "cleaner between cleanings."
- Advanced polymer and other proprietary finishes provide corrosion resistance.
- Smooth, rounded corners to allow for easier cleaning.

*Microban protection is not designed to protect users against disease causing microorganisms.



All Metro Catalog Sheets are available on our website: www.metro.com



InterMetro Industries Corporation

LO2-214 Printed in U.S.A. 2/20

Specifications

- Cart Body: High-density polyethylene (HDPE) side panels and ABS polymer top and bottom shrouds. All exterior polymer surfaces contain Microban[®] antimicrobial product protection.
- Cart Frame: Baked-on epoxy-coated cold-rolled steel (CRS) top and bottom frames with ABS polymer shrouds, attached to four extruded clear anodized aluminum posts with chrome plated slotted inserts, with 1" (25mm) shelf adjustability.
- Standard Casters: Four 5" diameter polyurethane casters, two front casters with easily accessed toe brakes and two rear swivel casters.
- Cabinet Body: Blow molded HDPE side panels, and solid HDPE floor and top. All exterior polymer surfaces contain Microban® antimicrobial product protection.
- Cabinet Frame: Baked on epoxy coated CRS base frame, attached to four extruded clear anodized aluminum posts with chrome plated slotted inserts with 1" (25mm) shelf adjustability.
- Door: Blow molded HDPE, with Microban antimicrobial protection, door panel with epoxy coated CRS reinforcement. Optimal clear acrylic windows.

• Carts Dimensions/Capacity (Mobile):

		Dimensions W x D		or Dimensions H x W x D	Storag	e Capacity	Max. Weigh	nt Capacity
Cart	(in.)	(mm)	(in.)	(mm)	(Cubic Feet)	(Cubic Meters)	(lbs.)	(kg.)
Single Wide	67 x 20.4 x 25.2	1701 x 518 x 640	78 x 22.7 x 28	1981 x 576 x 711	20	0.56	300	136
Double Wide	67 x 40.2 x 25.2	1702 x 1021 x 640	78 x 42.5 x 28	1982 x 1079 x 711	40	1.13	600	272
Triple Wide	67 x 60.5 x 25.2	1703 x 1537 x 640	79 x 64 x 28	1983 x 1625 x 711	60	1.70	600	272

• Cabinets Dimensions/Capacity (Stationary):

	Interior Dimensions H x W x D		Exterior Dimensions H x W x D		Storage Capacity		Max. Weight Capacity	
Cart	(in.)	(mm)	(in.)	(mm)	(Cubic Feet)	(Cubic Meters)	(lbs.)	(kg.)
Single Wide	67 x 20.4 x 25.2	1701 x 518 x 640	72.5 x 41.33 x 21.5	1842 x 1050 x 546	20	0.56	300	136
Double Wide	67 x 40.2 x 25.2	1702 x 1021 x 640	78 x 42.5 x 28	1982 x 1079 x 711	40	1.13	600	272

• Shelves Dimensions/Capacity:

		Dim W:	Max. Weigh	nt Capacity	
Shelf	Cat. No.	(in.)	(mm)	(lbs.)	(kg.)
Single Wide	SXR2416FWQ	20 x 22.2 x 0.7	1701 x 518 x 640	100	45.4
Double Wide	SXR2426FWQ	40 x 22.3 x 0.7	1702 x 1021 x 640	200	90.7
*Triple Wide		*Uses (1) Single	& (1) Double Width She	f	

Starsys® XD Enclosed Storage



Accessories

Door Locking:

- No Lock (not shown)
- Manual Key Lock (Fig.1)
- Electronic PIN Lock (Fig. 2)

Note: Standard code lock is an auto locking mechanism that locks upon closing the door. Manual code locking is available via custom engineering.

Electronic PIN Lock (with key override) Features:

- Eliminates the need to carry a key
- Programmable 4 to 8-digit PIN
- Simple operation: Type a valid PIN, press ENTER, turn the lever to unlock, turn back to lock.
- Low battery indicator Powered by 2-AAA batteries (included),
- Easy to maintain: Simply remove retaining screw to access/replace batteries, only 1x per year





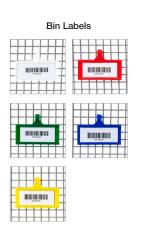


Fig. 2



Accessories

			Dimensions		Pkg.	Pkg. Weight Bin Label PS-LH-3		
Item	Description	Cat. No.	(in.)	(mm)	(lbs.)	(kg.)	Color	Quantity
Bin Labels	Extra depth wire shelf label holders.	SXRWSBINLBL-CL	3" x 1.375"	76.2 x 34.93	.2	.09	Clear	25
		SXRWSBINLBL-RD	3" x 1.375"	76.2 x 34.93	.2	.09	Red	25
		SXRWSBINLBL-GN	3" x 1.375"	76.2 x 34.93	.2	.09	Green	25
	dridir labor fioladra.	SXRWSBINLBL-BL	3" x 1.375"	76.2 x 34.93	.2	.09	Blue	25
		SXRWSBINLBL-YL	3" x 1.375"	76.2 x 34.93	.2	.09	Yellow	25
Bin Rails	Rail with 2 clips.	BINRL24	22.25" x 1.25" x .25"	565.15 x 31.75 x 6.35	7.8	3.54	-	8
Handles	Starsys XD tall mobile unit handle.	SXREHAN	21.438" x 4" x 4.295"	544.53 x 101.6 x 109.09	4	1.82	-	?
Label Holder	Starsys XD label holder.	SXRXDLBLHOLDER	18" x 1.388" x 0.512"	457.2 x 35.26 x 13	2.4	1.089	-	1
Shelf Dividers	Divider with 2 clips.	MUD24H4-4PK	14.563" x 3.979" x 0.227"	369.9 x 101.06 x 5.77	4	1.82	-	4
	Divider with 2 dips.	MUD24-8	22.49" x 8.125" x 0.5"	571.25 x 206.38 x 12.7	1.6	.73	-	1





Bin Rails







**Note: Pre-configured units ship with:
(1) Dark Taupe SXRDP-TP &
(1) Slate Blue SXRDP-Bl

Starsvs Wire Shelf

Job

Starsys XD Preconfigured Units

NOTE: All preconfigured units come standard with (8) XD shelves installed at a 20° up angle.







SINGLE WIDE SXRS76MXD1



DOUBLE WIDE SXRD76MXD2



TRIPLE WIDE SXRT76MXD1

Stationary



SINGLE WIDE



DOUBLE WIDE

Double Wide Mobile Cart Single Wide Mobile Cart Triple Wide Mobile Cart Code Locking Key Locking Clear Doors Preconfigured Part # SXRS76MXD1 SXRS76MXD2 2 SXRS76MXD3 3 4 SXRS76MXD4 5 SXRS76MXD5 6 SXRS76MXD6 SXRD76MXD1 7 \checkmark SXRD76MXD2 8 SXRD76MXD3 9 10 SXRD76MXD4 SXRD76MXD5 11 SXRD76MXD6 12 13 SXRT76MXD1 SXRT76MXD2 14 15 SXRT76MXD3 16 SXRT76MXD4 SXRT76MXD5

/

Alternate configurations are available and can be built on the configurator.

Visit www.metroconfigurator.com

an Ali Group Company

SXRT76MXD6

17

18

