




Pro-Wipe® SE Knit

100% Continuous Knit Polyester
Sealed Edge

Pro-Wipe® SE Knit is an all-purpose sealed edge knit wiper. It is cleanroom laundered for use in controlled environment and industrial applications. This is a durable wiper with exceptional cleanliness compared to other industrial wipers. An economical alternative to a standard cleanroom knitted polyester wiper.

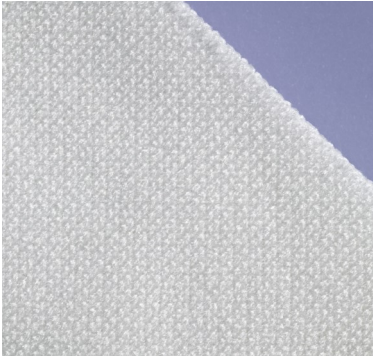

Key Attributes

- 100% continuous filament knit polyester
- Ultrasonically sealed edge for reduced fiber contamination
- Laundered and packaged in ISO Class 4 (Class 10) cleanroom
- Silicone free

Benefits

- Superior durability and strength
- Pre-laundered wiper reduces particle contamination
- Durable and versatile wiper suited for controlled environments use
- Chemically compatible with IPA, acetone and other solvents
- Autoclavable

Applications

- Cleaning of surfaces and equipment in controlled environments
- Cleaning of lab equipment
- General wiping in anteroom and wash areas
- Durable polishing cloth
- Cleaning of print heads
- Paint surface prep

Technical Data:

Attribute		Units	Value	Test Method
Basis Weight		g/m ²	136	TAPPI T410
Fibers	≥ 100µm	fibers/cm ²	0.28	IEST-RP.CC004.3, Sec 6.1.3 / Sec 6.2.2
Water Absorbency		%	260	IEST-RP.CC004.3, Sec 8.1 modified
Extractable Matter	DI water	%	0.0046	IEST-RP.CC004.3, Sec 7.1.2
	IPA	%	0.010	

Technical data represented in this table are typical values at the time of publication. These should not be used as product specifications.

Pro-Wipe® Family

- Pro-Wipe® AP
- Pro-Wipe® OS
- Pro-Wipe® SE Knit



Flat Pack

Order Information:

Product	Number	Size	Shts/pk	Pks/cs	Style
Pro-Wipe® SE Knit	PWSEK09.14	9x9" (23x23cm)	150	14	Flat

Contact: Tel 1.800.242.7000 / 1.413.528.2602 info@berkshire.com