

# Jamco Heavy Duty Safety Cabinet Features

jamcoproducts.com

## Jamco Heavy Duty Safety Cabinet Features


More steel than other brands; FM Approved

14-gauge doors are 56% more steel than 18-gauge of others, superior weld hinges with brass pins give greater support. Doors have flush handles. Features our patented flame arrester vents. Meets OSHA, NFPA code 30, UFC 79 standards, and are FM APPROVED. Powder Coated Yellow (Flammable), Red (Paint and Ink), Blue (Corrosive), Green (Pesticides) and Gray (Hazardous Waste).

**FIRST TO ACHIEVE**  
CERTIFIED TO THE NEW FM STANDARD



Safety Flammable Cabinets  
are FM Certified, Class 6050,  
December 2016

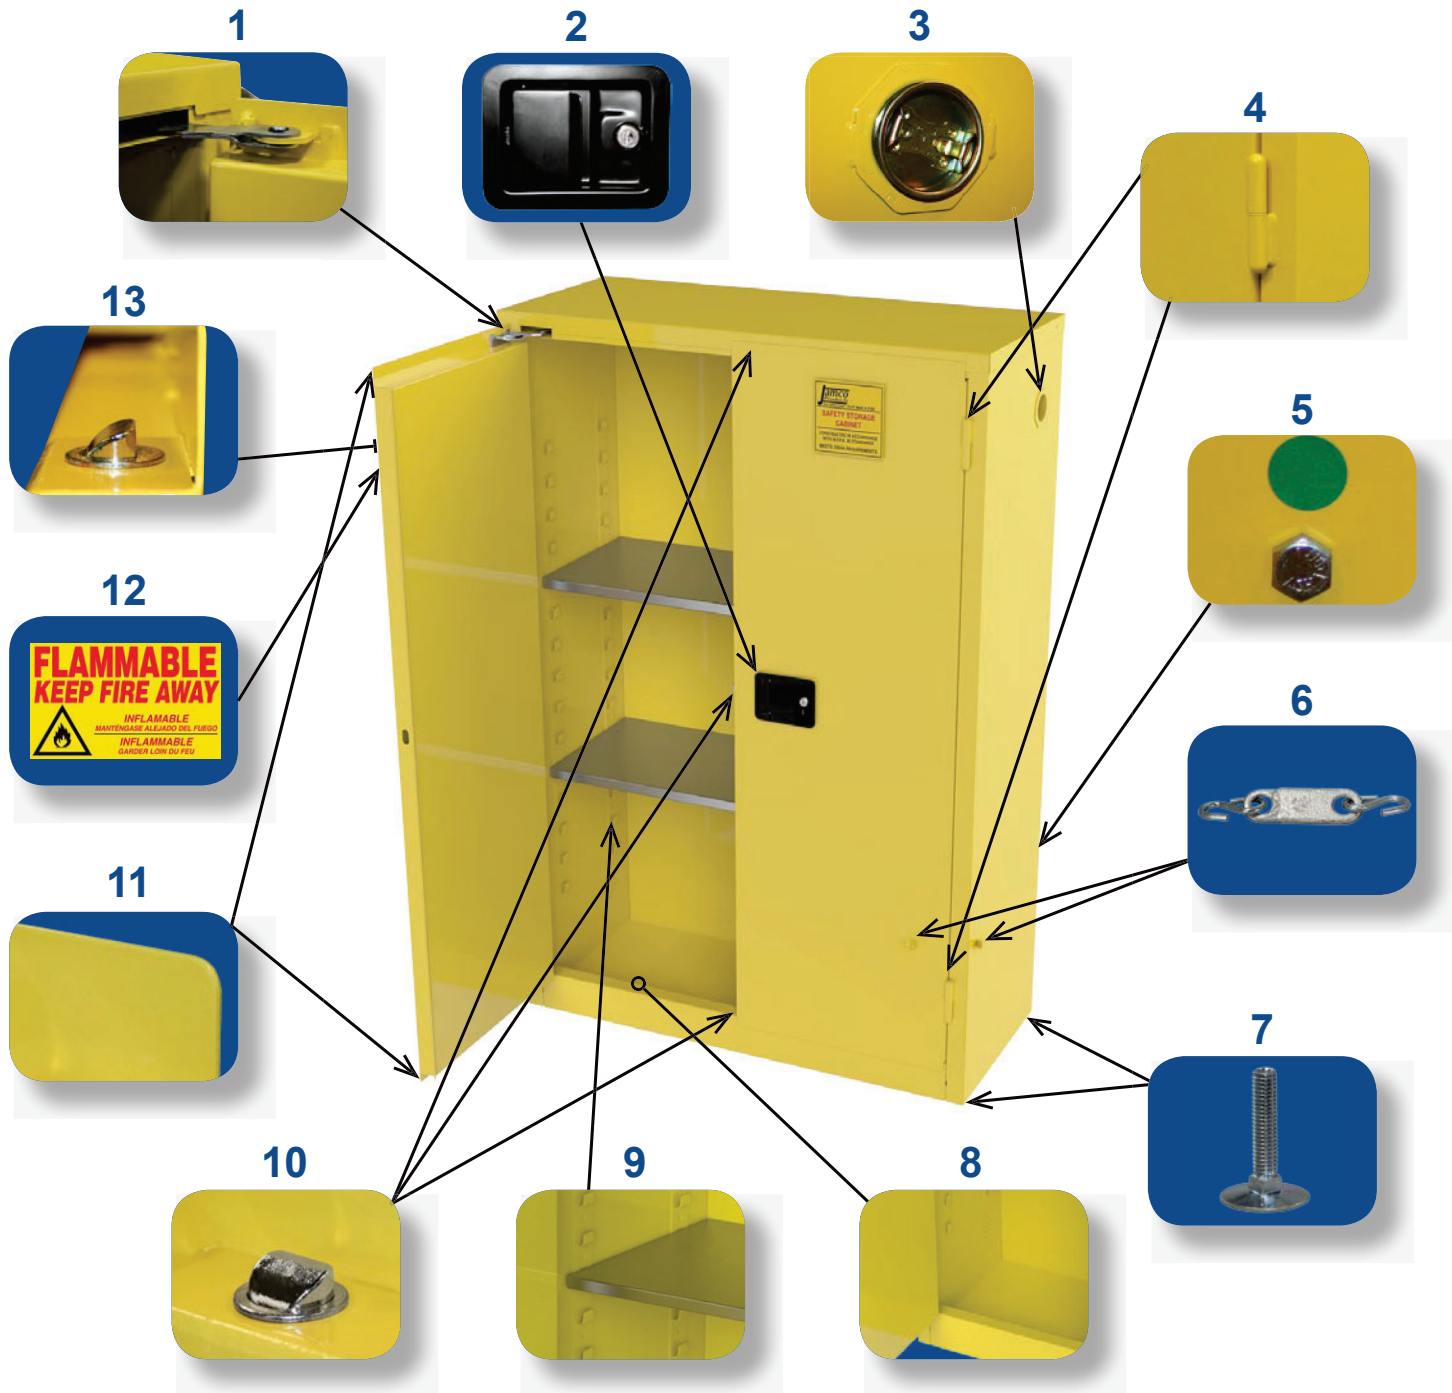

1. Exclusive gas cylinder, self close mechanism; fully concealed, no rods to bend or break
2. Flush mounted paddle handle
3. Twin flame arrester vents (*Jamco Patent No. 10,463,896*)
4. 4" Heavy duty weld hinge with 3/8" brass pin
5. Grounding connector
6. Lead fusible link
7. Adjustable leveling feet

8. 2" leakproof sill for spill containment
9. 16-gauge louvered shelf supports to adjust shelves on 3" centers
10. 3-point locking system
11. Rounded safety corners on doors
12. Safety signage in large red lettering
13. Heavy duty 14-gauge door

## Model BM

Manual close cabinet for flammable liquid storage

### Product Features:

- All welded double wall 18-gauge construction with 1-1/2" insulating air space
- 2" leakproof sill to contain leaks
- Lockable flush mounted handle with 2 keys
- Doors have 3 point locking system and radius edges
- Doors are double walled, 14-gauge outside and 18-gauge inside
- 4" heavy duty weld hinges with 3/8" brass pins
- Twin 2" flame arrester vents
- Adjustable leveling feet
- Safety signage in large red letters
- Galvannealed steel shelves adjust on 3" centers
- Grounding connector
- Meets OSHA, NFPA Code 30, UFC 79 Standards and are FM Class 6050 approved
- Manual close doors open full 180°
- Powder coated yellow finish

### Options: (Contact customer service for pricing)

- Additional galvannealed shelves - see charts



BM60YP



Description (WxDxH inches)	Model Number	Capacity Gallons	# Shelves	Weight (lbs.)	Additional Shelves	Weight (lbs.)
34x18x35	<b>BM22YP</b>	22	1	182	<b>GS134</b>	8
34x18x44	<b>BM28YP</b>	28	2	234	<b>GS134</b>	8
43x18x44	<b>BM30YP</b>	30	1	254	<b>GS143</b>	12
34x18x65	<b>BM44YP</b>	44	3	334	<b>GS134</b>	8
43x18x65	<b>BM45YP</b>	45	2	360	<b>GS143</b>	12
34x34x65	<b>BM60YP</b>	60	2	440	<b>GS334</b>	16
43x34x65	<b>BM90YP</b>	90	2	504	<b>GS343</b>	22
59x34x65	<b>BM120YP</b>	120	2	620	<b>GS359</b>	30

## Model BS

Self close cabinet for flammable liquid storage

### Product Features:

- All welded double wall 18-gauge construction with 1-1/2" insulating air space
- 2" leakproof sill to contain leaks
- Lockable flush mounted handle with 2 keys
- Doors have 3 point locking system and radius edges
- Doors are double walled, 14-gauge outside and 18-gauge inside
- 4" heavy duty weld hinges with 3/8" brass pins
- Twin 2" flame arrester vents
- Adjustable leveling feet
- Safety signage in large red letters
- Galvannealed steel shelves adjust on 3" centers
- Grounding connector
- Meets OSHA, NFPA Code 30, UFC 79 Standards and are FM Class 6050 approved
- Self close doors shut, index, latch automatically as fusible links melt under fire conditions at 165° F
- Concealed self closing mechanism
- Powder coated yellow finish

### Options: (Contact customer service for pricing)

- Additional galvannealed shelves - see charts



BS60YP



Description (WxDxH inches)	Model Number	Capacity Gallons	# Shelves	Weight (lbs.)	Additional Shelves	Weight (lbs.)
34x18x35	<b>BS22YP</b>	22	1	196	<b>GS134</b>	8
34x18x44	<b>BS28YP</b>	28	2	248	<b>GS134</b>	8
43x18x44	<b>BS30YP</b>	30	1	268	<b>GS143</b>	12
34x18x65	<b>BS44YP</b>	44	3	348	<b>GS134</b>	8
43x18x65	<b>BS45YP</b>	45	2	374	<b>GS143</b>	12
34x34x65	<b>BS60YP</b>	60	2	454	<b>GS334</b>	16
43x34x65	<b>BS90YP</b>	90	2	518	<b>GS343</b>	22